

OUTFIT

**Top mount
Oil Piston Pumps**

MODEL

1136-XXX

QUICK START GUIDE

1. Attach the 6" tote cap (4530-068) to the tank and place the dust cover (833685).
2. Mount the top mount bracket (4411-034) on the tote adjusting the J hook bolt (JH).
At this time do not completely tighten bolt. Ensure the dust cover is on its place.
3. Apply Teflon tape to the down tube before installing it to the pump inlet port.
Then immerses the pump in the product to be pumped and fix the pump using the bung adaptor included in the pump (4411-009N or 4411-022).
4. Before mounting the hose reel over the bracket, move the hose guide arm to place the outlet in wall position as it's shown at the images below.
5. Attach the FRL mounting bracket (3261-007) to the top bracket: use holes the plate as a template. Mark mounting holes locations. Use a drill to predrill holes in mounting surface. Install the regulator (3260-060) using the mounting nut (833533).
6. Install fittings and hoses (8134-003 & 8249-002X): ensure the threaded connections are properly sealed and tightened.

- 2-275GA
- 3-330GA
- 1-LYNX 3:1
- 2-LYNX 5:1HD
- 3-PANTHER 3:1
- 3-EVO 30'
- 5-EVO 50'

